

EXCESSIVE NOISE

FRACTURED SPRING

A cracked or fractured spring can cause the feeder bowl to operate violently and produce excessive noise. Compromised springs must be exchanged with the appropriate replacement springs as per the spring replacement procedure.

FRACTURED SPRING →

