INSTALLATION TIPS



COMPRESSED AIR

Connecting a vibratory feeder system to compressed air may be one of the easiest tasks when installing a vibratory feeder system. At Stromag, we provide every air equipped feeder with a regulator with an air pressure display gauge. The operating air pressure will be indicated on the regulator or name plate for customer reference. Be sure that the air that is supplied to the vibratory feeder system has been dried and separated from any contaminants.

