

ORIENTATION AND LEVELING

Make sure that the machine is not interfering with any outside objects or equipment. The area around the bowl and inline track must remain free and clear from any interference.

During installation, it is essential that the machine must be properly leveled to insure proper machine performance. The leveling feet are used in conjunction with a level to adjust the leg lengths.

